


# No Limit Fabrication

5. Connect the shift on the fly cable terminals to the connector with the exposed copper wire facing up while the connector housing is positioned as depicted in picture below. It does not matter which terminal goes in which hole. Be sure the terminals fully seat in terminal housing and click in place.

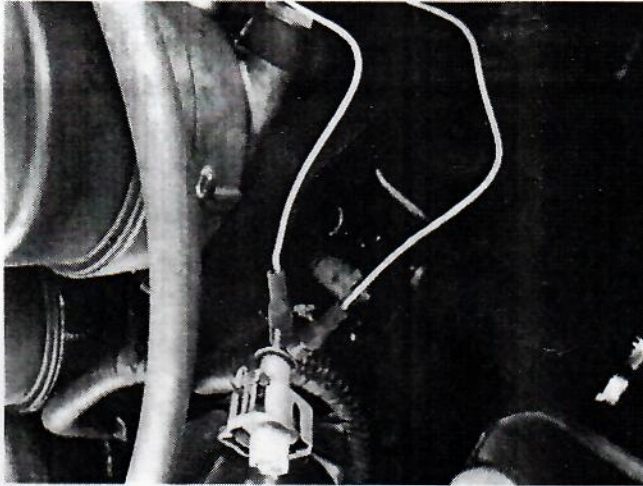

6. Use Posi-tap end of these wires.

